



## DMX CHART – LUXIBEL B EXPO350A

### 8-Channel Mode

Channel	Number	Function
CH1	0-255	Coarse Dimmer
CH2	0-255	Fine Dimmer
CH3	0-255	Zoom
CH4	0-255	Tilt
CH5	0-255	Fine Tilt
CH6	0-255	Pan
CH7	0-255	Fine Pan
CH8	0-127 128-255	Lock Remote Unlock Remote

### 11-Channel Mode

Channel	Number	Function
CH1	0-255	Coarse Dimmer
CH2	0-255	Fine Dimmer
CH3	0-255	Zoom
CH4	0-255	Tilt
CH5	0-255	Fine Tilt
CH6	0-255	Pan
CH7	0-255	Fine Pan
CH8	0-5 6-127 128-255	Strobe Open Strobe effect slow to fast Random strobe effect slow to fast
CH9	0-84 85-169 170-255	Fan Mode: Auto Fan Mode: Silent Fan Mode: High
CH10	0-0 1-50 51-101 102-152 153-203 204-255	No Function Frequency Preset: 600 Hz Frequency Preset: 1200 Hz Frequency Preset: 2000 Hz Frequency Preset: 2400 Hz Frequency Preset: 4000 Hz
CH11	0-127 128-255	Lock Remote Unlock Remote

